



1 - Main Housing	MXL6/4-001	15 - Spool Spring Washer (2 req.)	MXL6/4-015	30 - Washer MDL	MXL6/4-030	45 - Dog Cover	MXL6/4-045	60 - Crank Arm	MXL6/4-060	76 - Lock Screw Washer	MXL6/4-076
2 - Gear cover	MXL6/4-002	16 - Spool Spring	MXL6/4-016	31 - Drive Gear LRG	MXL6/4-031	46 - Stop Pin (2 req.)	MXL6/4-046	61 - Crank Arm Washer	MXL6/4-061	77 - Lock Screw	MXL6/4-077
3 - Cover Screw (2 req.)	MXL6/4-003	17 - Brake Bearing	MXL6/4-017	32 - Washer RT	MXL6/4-032	47 - Pin Screw (2 req.)	MXL6/4-047	62 - Push Knob E-Clip	MXL6/4-062	78 - Handle	MXL6/4-078
4 - Spool Shaft	MXL6/4-004	18 - Brake Disk	MXL6/4-018	33 - Fork	MXL6/4-033	48 - End Housing Screw (3 req.)	MXL6/4-048	63 - Crank Arm Nut	MXL6/4-063	79 - Clicker Pin	MXL6/4-079
5 - Belleville Washers (4 req.)	MXL6/4-005	19 - Antireverse Gear	MXL6/4-019	34 - Fork Spring	MXL6/4-034	49 - Drive Shaft Tube	MXL6/4-049	64 - Push Knob	MXL6/4-064	80 - Pin Support	MXL6/4-080
6 - Pusher Bushing	MXL6/4-006	20 - Dovel Pin (4 req.)	MXL6/4-020	35 - Pusher	MXL6/4-035	50 - Drive Shaft Washer	MXL6/4-050	65 - Lock Plate	MXL6/4-065	81 - Rod Mount	MXL6/4-081
7 - Spool Bearing	MXL6/4-007	21 - Disk Drive	MXL6/4-021	36 - Pusher Spring	MXL6/4-036	51 - Male Cam	MXL6/4-051	66 - Release Arm Spring	MXL6/4-066	82 - Rod Mount Screw (2 req.)	MXL6/4-082
8 - Spool Tube	MXL6/4-008	22 - Large Pinion Gear	MXL6/4-022	37 - Drive Shaft	MXL6/4-037	52 - Lever Arm	MXL6/4-052	67 - Spring Pin	MXL6/4-067	83 - Rod Mount Clamp	MXL6/4-083
9 - Clicker Gear Retainer Ring	MXL6/4-009	23 - Small Pinion Gear	MXL6/4-023	38 - Pusher Washer	MXL6/4-038	53 - Female Cam	MXL6/4-053	68 - Release Arm	MXL6/4-068	84 - Clamp Screw	MXL6/4-084
10 - Clicker Gear	MXL6/4-010	24 - Pinion Bearing	MXL6/4-024	39 - Pusher E-Clip	MXL6/4-039	54 - Handle Knob	MXL6/4-054	69 - Push Knob Cover	MXL6/4-069	85 - Pin Washer	MXL6/4-085
11 - Spool	MXL6/4-011	25 - Drive Shaft Stop Nut	MXL6/4-025	40 - Drive Shaft Bearing (2 req.)	MXL6/4-040	55 - Knob Screw	MXL6/4-055	70 - Cover Screws (2 req.)	MXL6/4-070	86 - Clicker Spring (2 req.)	MXL6/4-086
12 - Brake Pad	MXL6/4-012	26 - Connection Arm	MXL6/4-026	41 - End Housing	MXL6/4-041	56 - Drive Washer	MXL6/4-056	71 - Crank Arm Washer	MXL6/4-071	87 - Clicker Arm	MXL6/4-087
13 - Brake Pad Retainer Ring	MXL6/4-013	27 - Friction Ring	MXL6/4-027	42 - Dog Washer	MXL6/4-042	57 - Preset Washer	MXL6/4-057	72 - Handle Tube washer	MXL6/4-072	88 - Pin E-Clip	MXL6/4-088
14 - Spool Bearing	MXL6/4-014	28 - Washer LF	MXL6/4-028	43 - Dog	MXL6/4-043	58 - Preset Spring	MXL6/4-058	73 - Handle Tube	MXL6/4-073		
		29 - Drive Gear SML	MXL6/4-029	44 - Dog Cover Screw (2 req.)	MXL6/4-044	59 - Preset Knob	MXL6/4-059	74 - Lock Screw Nut	MXL6/4-074		
								75 - Shoulder Bolt	MXL6/4-075		