LOOP Evotec G4 FW, LW & HD Fly Reel Manual

Congratulations on the purchase of your new flyreel. We wish you many seasons of good use of your new reel in flyfishing. Enclosed are instructions for proper care and maintenance. Good luck!

Conversion left / right hand retrieve:


- 1. Remove spoolcap (27).
- 2. Pull spool (25) straight out.
- 3. Release stopscrews (2) ½ turn with enclosed Allen wrench.
- 4. Pull drag knob (1) straight out.
- 5. Remove drag knob nut (3).
- 6. Pull draw bar (24) straight out, together with cup springs (23).
- 7. Pull bearing holder (22) straight from shaft (15).
- 8. Remove seal ring (16).
- 9. Remove bearing (17), bearing washers (18), carbon plates (21) and one way bearing (20).
- 10. Turn one way bearing (20).
- 11. Wipe clean.
- 12. Assemble the reverse way.


Adjust the effect of the brake:

The drag knob nut (3) allows you to adjust the brake, in order to obtain the lowest brake effect of preference. We recommend free spool in both directions.

1. Turn the adjustment screw (3) until the lowest preferred brake effect has been obtained.

2. Fasten the drag nob to the ajdustment screw and turn the handle counter clockwise so that the heel on the inside of the drag nob (36) will settle to the left of the stop pin (9). Tighten the screws on the lock with the Allen wrench.

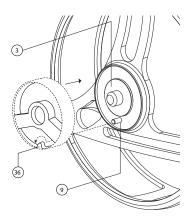

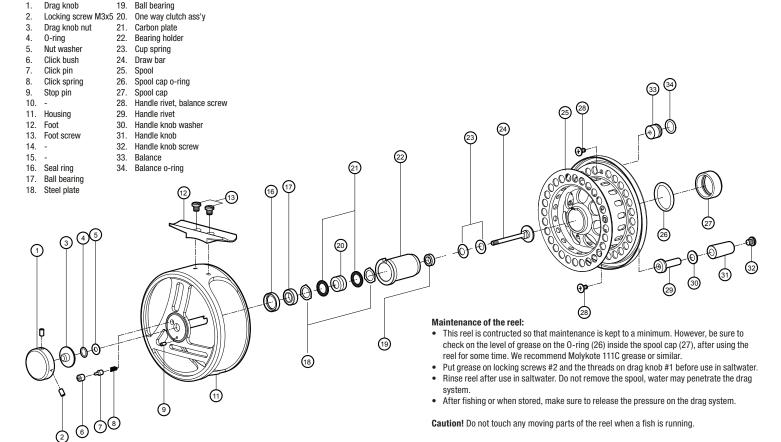

For more info on Loop fly tackle and accessories: www.looptackle.se